




Cabinet and Coin Door Wiring

Transformer Power Wiring Diagram




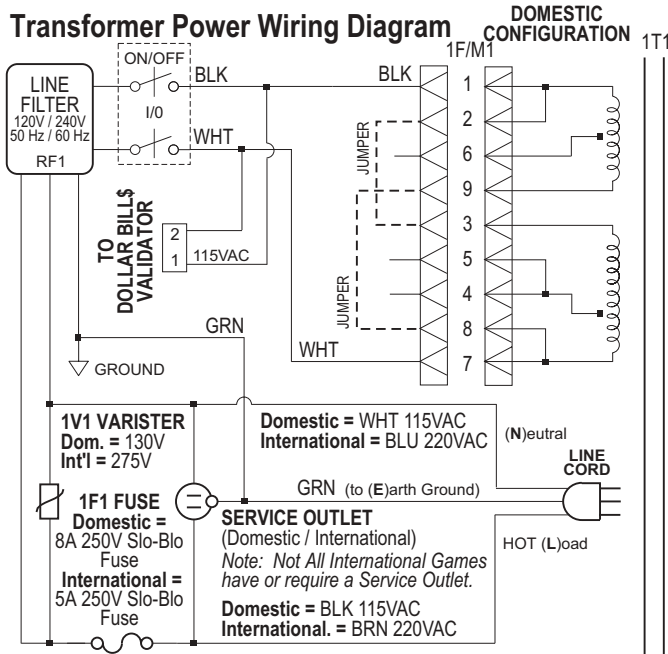


▼ Jumper Configurations for Voltage Variations ▼




N. AMERICA LINE VOLTAGE 110VAC / 120VAC

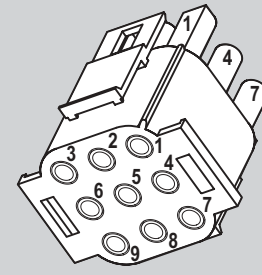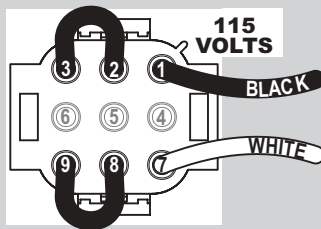


INTERNATIONAL or HIGH LINE VOLTAGE 230VAC / 218VAC / 206VAC

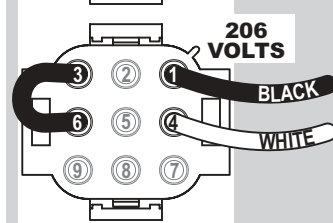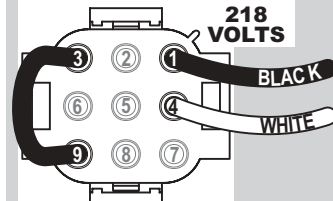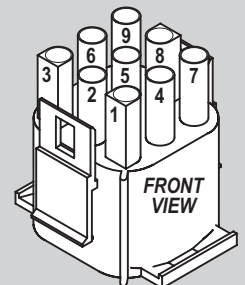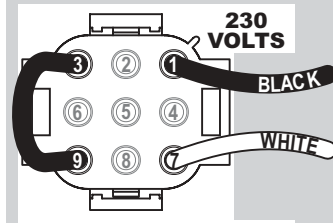

JAPAN or LOW LINE VOLTAGE 100VAC / 105VAC

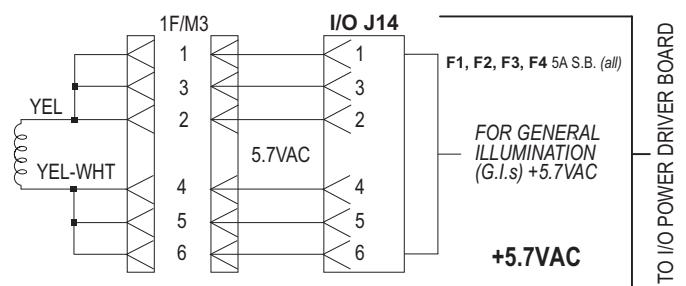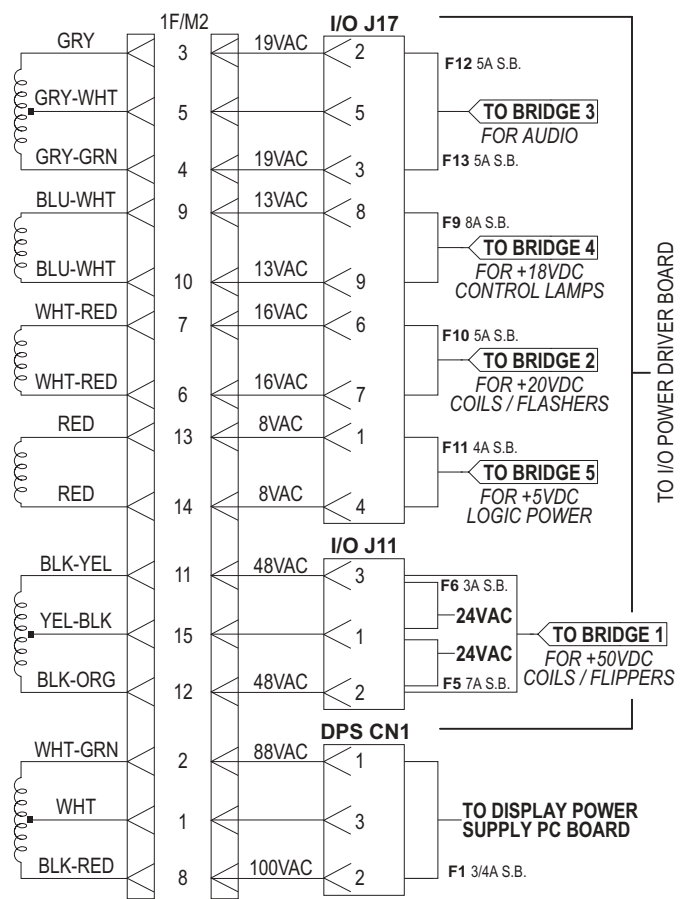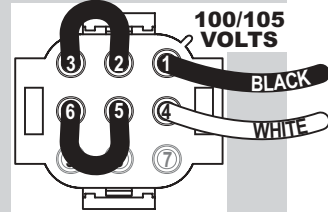

ALL FUSES RATED 250V SLO-BLO DO NOT OVERFUSE ▲

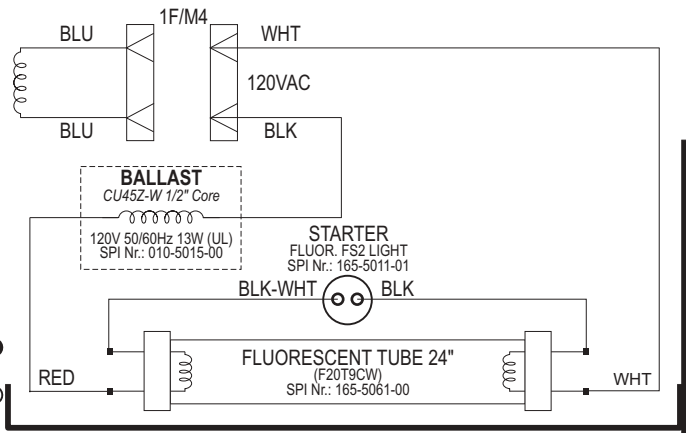


FLUORESCENT TUBE, STARTER & BALLAST LOCATED IN THE BACKBOX

TO I/O POWER DRIVER BOARD

TO I/O POWER DRIVER BOARD

Sec. 5: Cab. & Coin

Cabinet Wiring Diagram

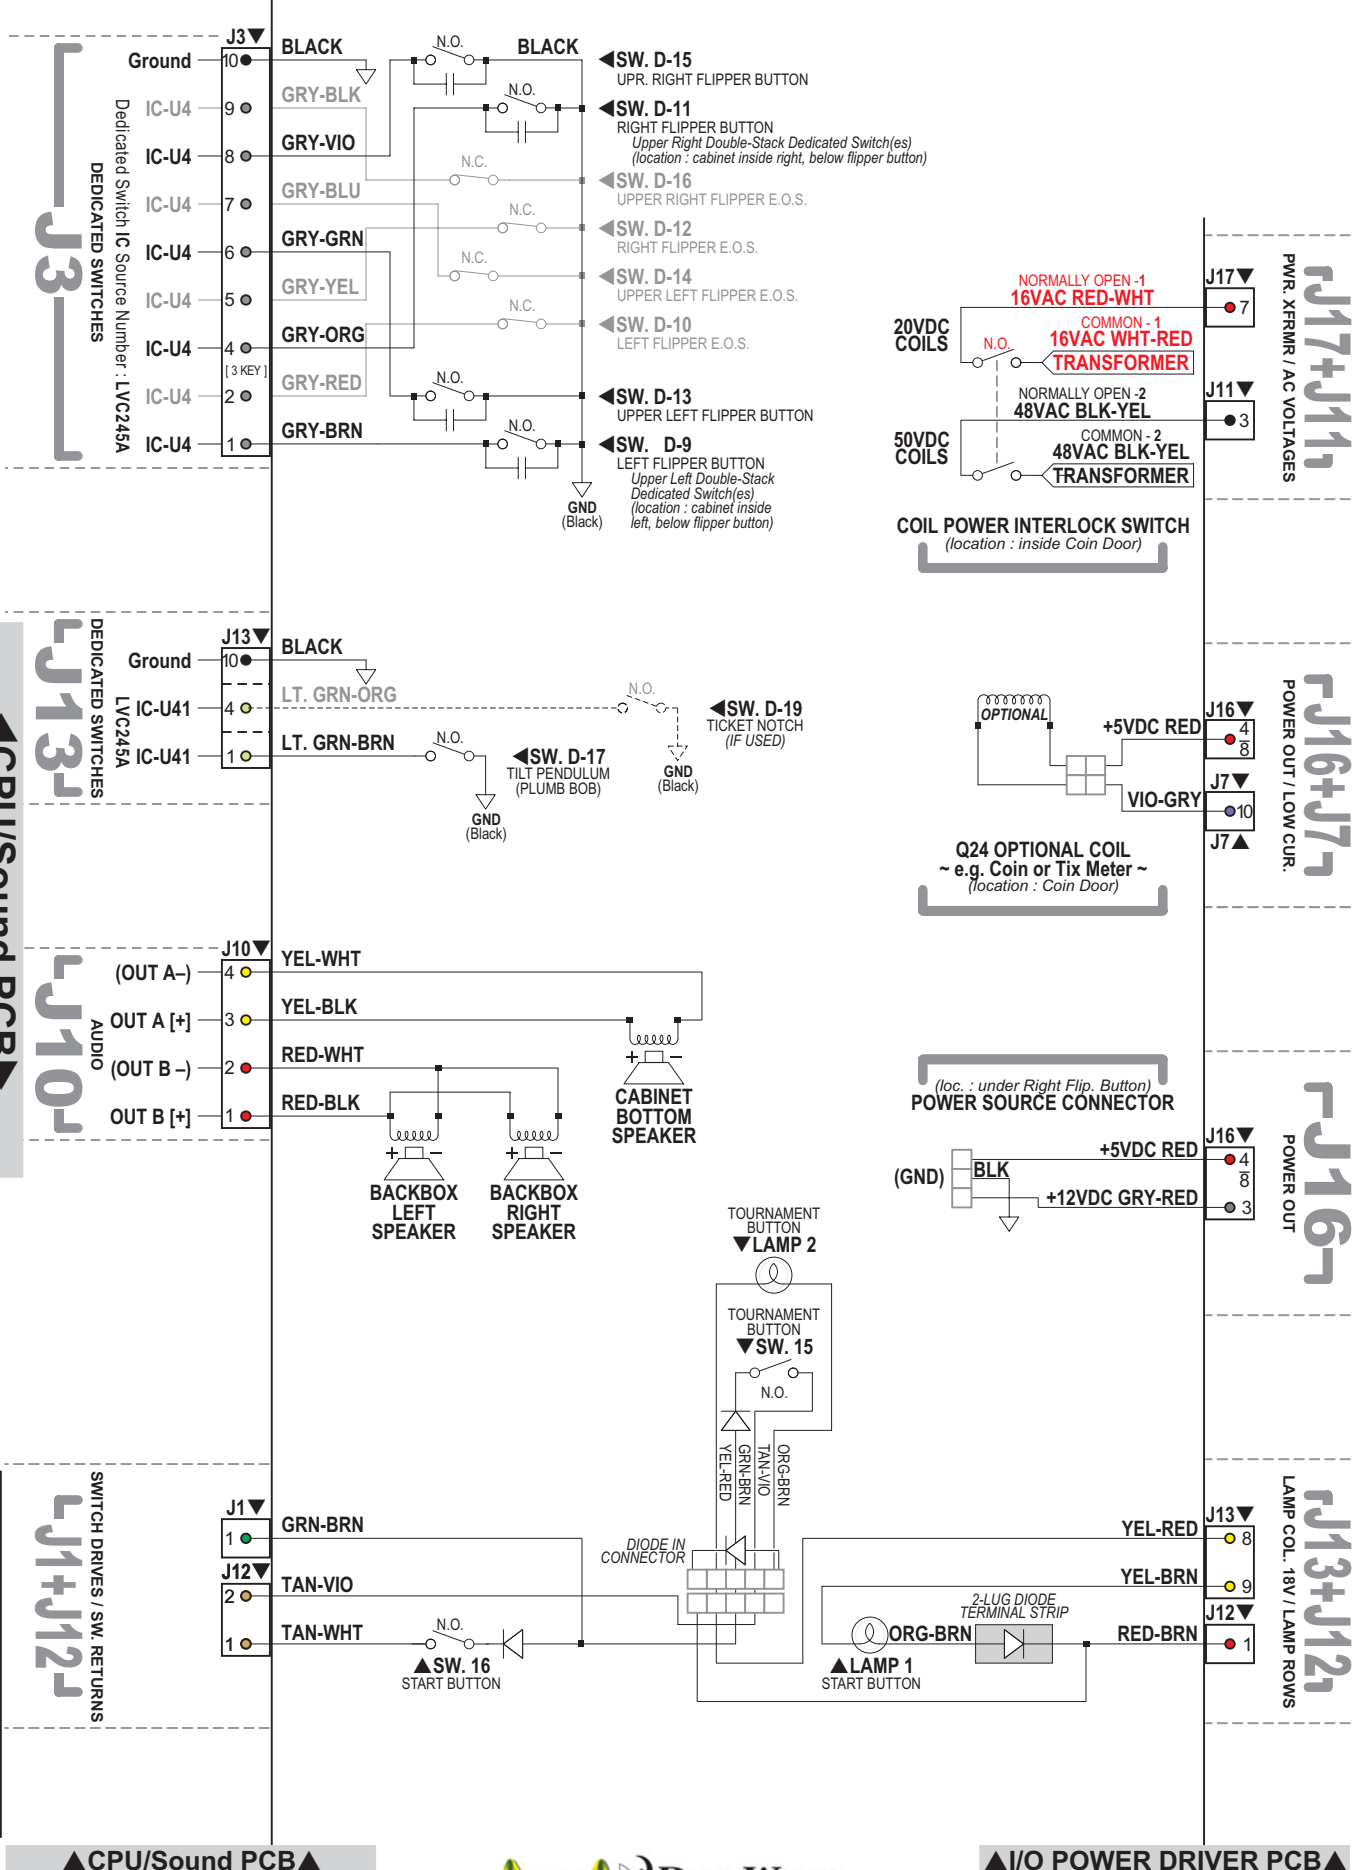

CPU/Sound PCB

I/O POWER DRIVER PCB

Sec. 5: Cab. & Coin

▲ CPU/Sound PCB ▲

▲ I/O POWER DRIVER PCB ▲



