




Nº 162 Service Bulletin

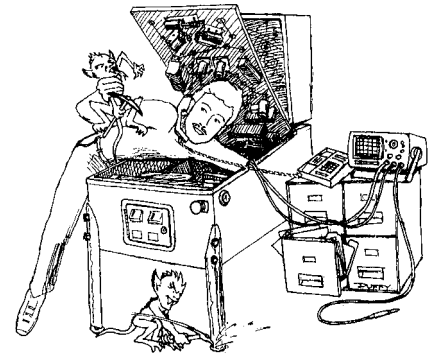

Joe Blackwell Director, Parts Sales & Technical Support	Chas Siddiqi Technical Support Engineer	Patrick Powers Technical Support Engineer	Dorothy Brown Parts Sales and Stock Room	J. Alfer Technical Support Documentation Administrator
---	---	---	--	--

TO: Parts & Service Managers

DATE: July 11, 2006

SUBJ: **Electronic Coin Mech Coin Return Lever Sticks.**
REDEMPTION GAMES AFFECTED:
 • **The Simpsons™ Kooky Carnival**
 • **MONOPOLY®** and • **TITANIC**

Symptom


High percentage of coin rejects (*potential drop in revenue*).

Problem

The shaft for the coin reject lever begins to stick in the down position causing the reject assembly to constantly reject coins (*see front view of the Electronic Coin Mech picture*).




Fig. 1

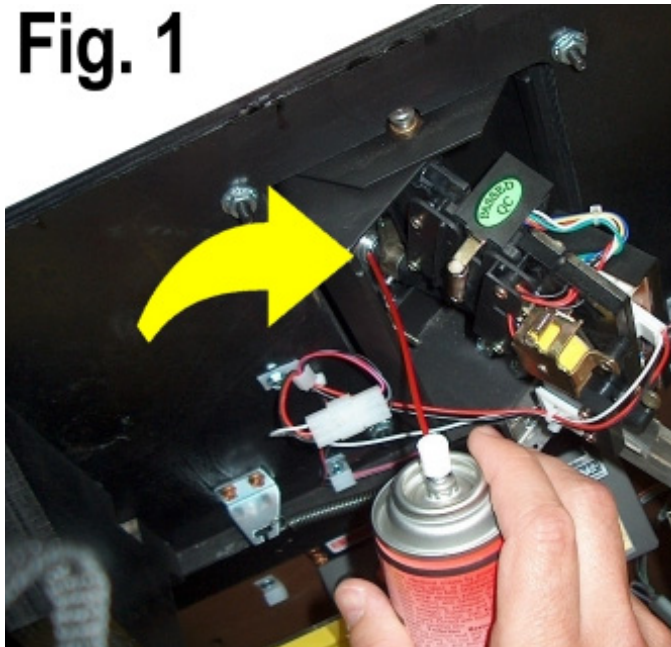

Solution QUICK FIELD FIX

Apply a **DRY TEFLON** or **SILICONE SPRAY LUBRICANT** to the shaft of the **COIN REJECT LEVER** at the points indicated in **Fig. 1 & 2**. *Note: spray both the front and back of the REJECT CAM.*

Fig. 2

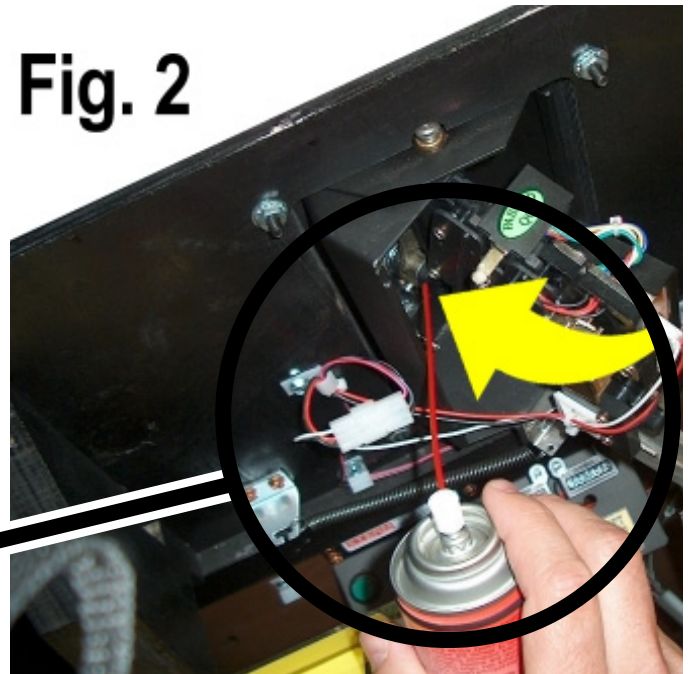

Continued on Page 2 for In Shop Fix.

Solution IN SHOP FIX

- Remove the four (4) 7mm (9/32") nuts securing the electronic coin mech assembly to the **PIVOT ASSEMBLY** (not the outside plate). Access from the inside of the cabinet by removing the control panel (unlatch the control panel brackets via the front door; brackets are labeled).
- Loosen the Phillips Head screw which secures the **REJECT CAM** to the **COIN REJECT SHAFT**.
- Remove the **COIN REJECT LEVER WITH SHAFT** from the coin mech assembly.
- Wipe clean the shaft and any surface of the coin mech which comes in contact with the shaft.
- Apply a small amount of **DRY TEFLON** or **SILICONE SPRAY LUBRICANT** to the shaft.
- Re-install the shaft to the electronic coin mech and then mount the coin mech back to the pivot assembly.
- Test with coins/tokens with glass removed for proper function.



Please phone or eMail with any questions or comments to the below address.